Advanced Rider Assistant

Supplementary Manual



Suzuki GSX-R1000 2009 (ARA-1 + ARA-K4B + ARA-D07)

Remove the passanger seat.



Remove the cover from the tank on the left side.



Remove the cover from the tank on the right side.





Suzuki GSX-R1000 2009 (ARA-1 + ARA-K4B + ARA-D07)

Remove the main seat.



Remove the fuel tank.



Remove the airbox.






Suzuki GSX-R1000 2009 (ARA-1 + ARA-K4B + ARA-D07)

Plug the ARA connectors in-line with the ignition coil connectors.

(Black, 2-pole connectors below the airbox.)

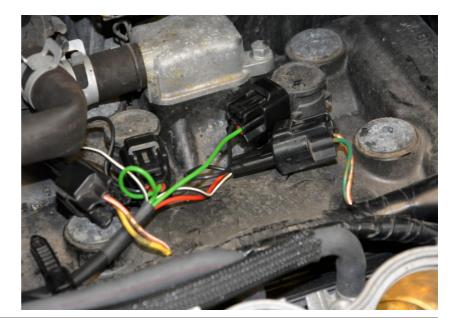


Mount the supplied disk and wheel speed sensor at the front wheel.

(Reinstall the brake disk as per the bike's service manual. For safety, you may use threadlocker to make sure the nut or bolt won't get loose due to vibrations. Adjust and tighten the sensor so that the sensor's tip will be in the centerline of the targets. The air-gap should be about 1mm.)




Connect the 3-pole sensor connector to the ARA wiring.

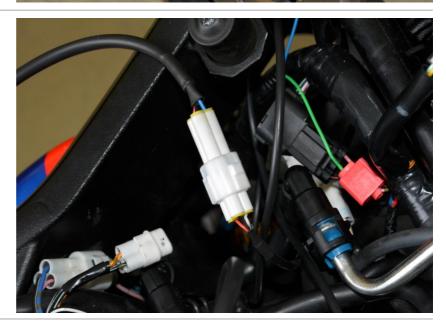



Suzuki GSX-R1000 2009 (ARA-1 + ARA-K4B + ARA-D07)

Splice the ARA Green wire to the Pink wire of the speed sensor connector.

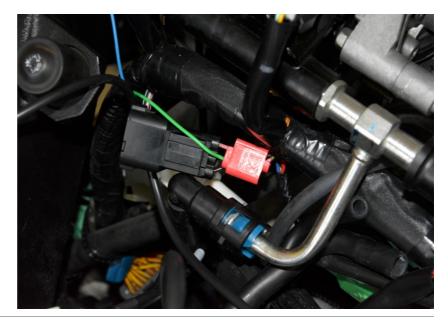

Optional:

Connect the Pink ARA wire to the Black/Yellow wire of the Clutch switch signal wire below the fuel tank.

The Clutch switch sensor has 2 identical Black/Yellow wire. While the connector is connected, turn ignition on. Measure the voltage (DC 20V setting) on the two wire, at the back side of the plug. You need to use the wire where the voltage value changes while you pull the clutch lever. Alternatively check the clutch switch indication in the ARA application on your phone.

Connect the ARA Black wire terminal to the chassis ground terminal.







Suzuki GSX-R1000 2009 (ARA-1 + ARA-K4B + ARA-D07)

Mount the switch onto the handlebar.



Mount the LED indicator on the dashboard.



Typical position for the ARA module unit.

Secure the unit Properly.

